















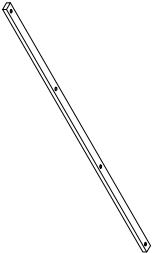

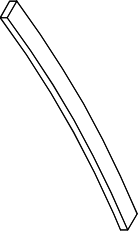


Assembly Instruction

ITEM NO.: BED1974-KING

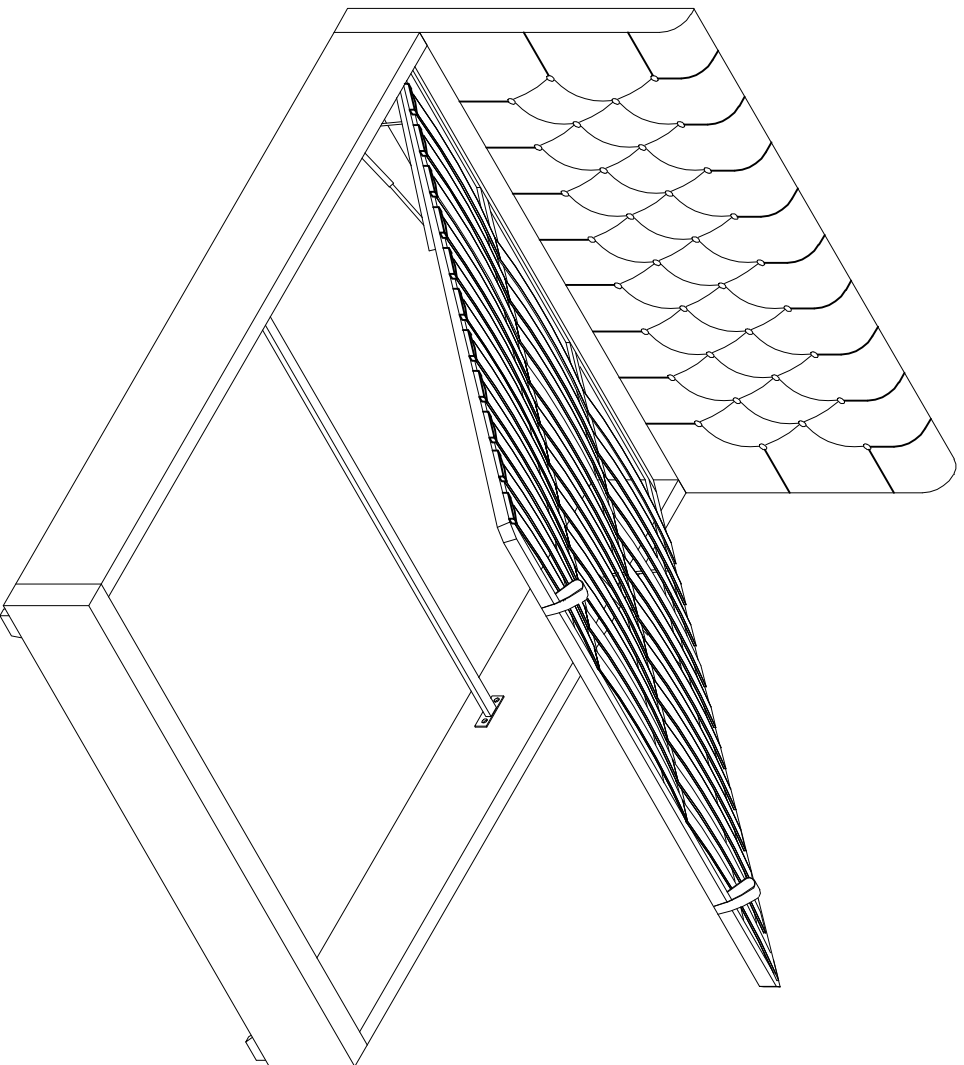






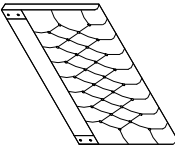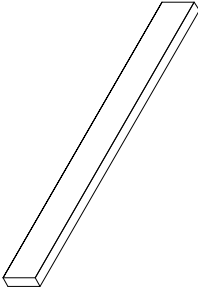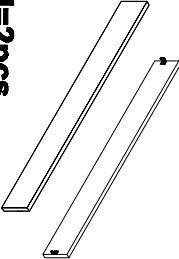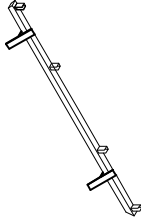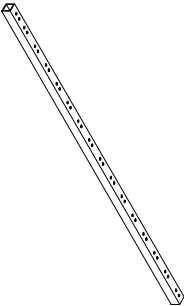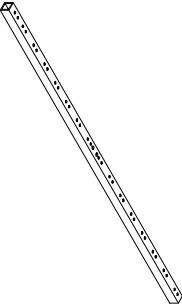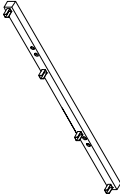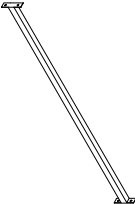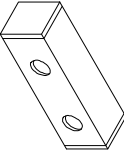


IMPORTANT: PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPETTO AVOID THE PARTS FROM BEING SCRATCHED KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP




PARTS LIST:


(A) 	(B) 	(C) 
Headboard=1pc	Footboard=1pc	LEG = 4PCS
(D) 	(E) 	(F) 
Siderail=2pcs	Support block on footboard=1PC	Metal side support rail=2PCS
(G) 	(H) 	(I) 
Centre rail=2PCS	Support block on headboard=1PC	Metal Centre cross rail=1PC
(J) 	(K) 	(L) 
Centre support leg=2PCS	Buse support=4PCS	Metal block=2PCS
(M) 	(N) 	(O) 
Metal corner block=2PCS	Metal Centre cross rail=1PC	Non-woven fabric=1PC
(P) 	(Q) 	(R) 
Slat=36PCS	Center plastic connector=24PCS	End cap=24PCS

HARDWARE LIST:


1	Allen Key $\varnothing 5/16"$ =1pc		
2	Bolt $\varnothing 5/16"$ X $3/4"$ L=28pcs		
3	Bolt $\varnothing 5/16"$ X 1-1/2" L= 8 pcs		
4	Bolt $\varnothing 5/16"$ X 2" L=16pcs		
5	Flat Washer $\varnothing 5/16"$ X $\varnothing 19$ mm=66pcs		
6	Spring Washer=66pcs		
7	Nut=8pcs		
8	Wrench=1pc		
9	Nut=2pcs		
10	Bolt $\varnothing 5/16"$ X 1" L=10 pcs		
11	Bolt $\varnothing 5/16"$ X $3/4"$ L=4pcs		

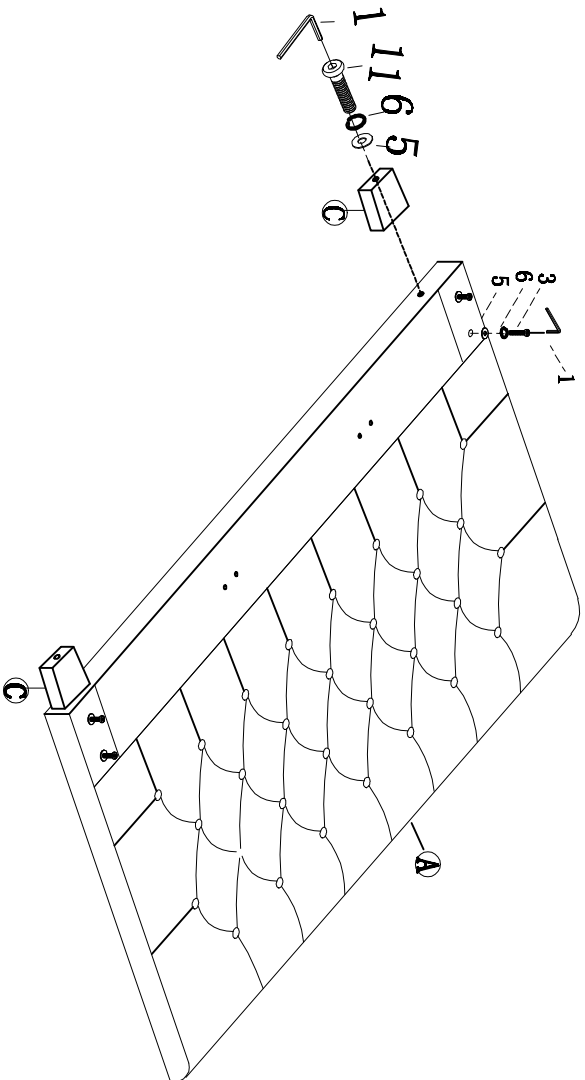


step 1

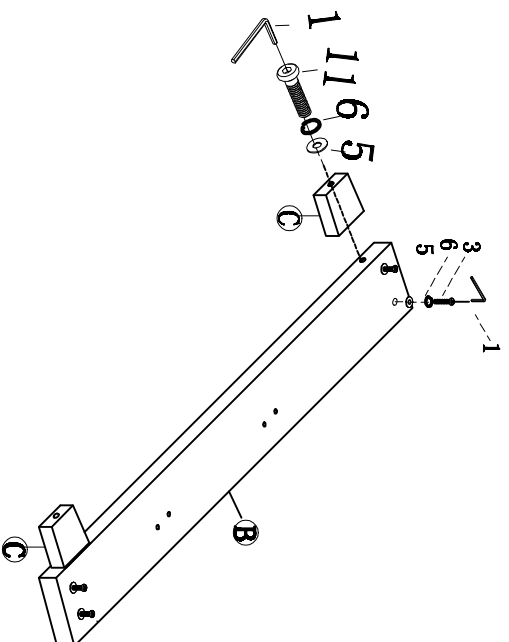


step 2

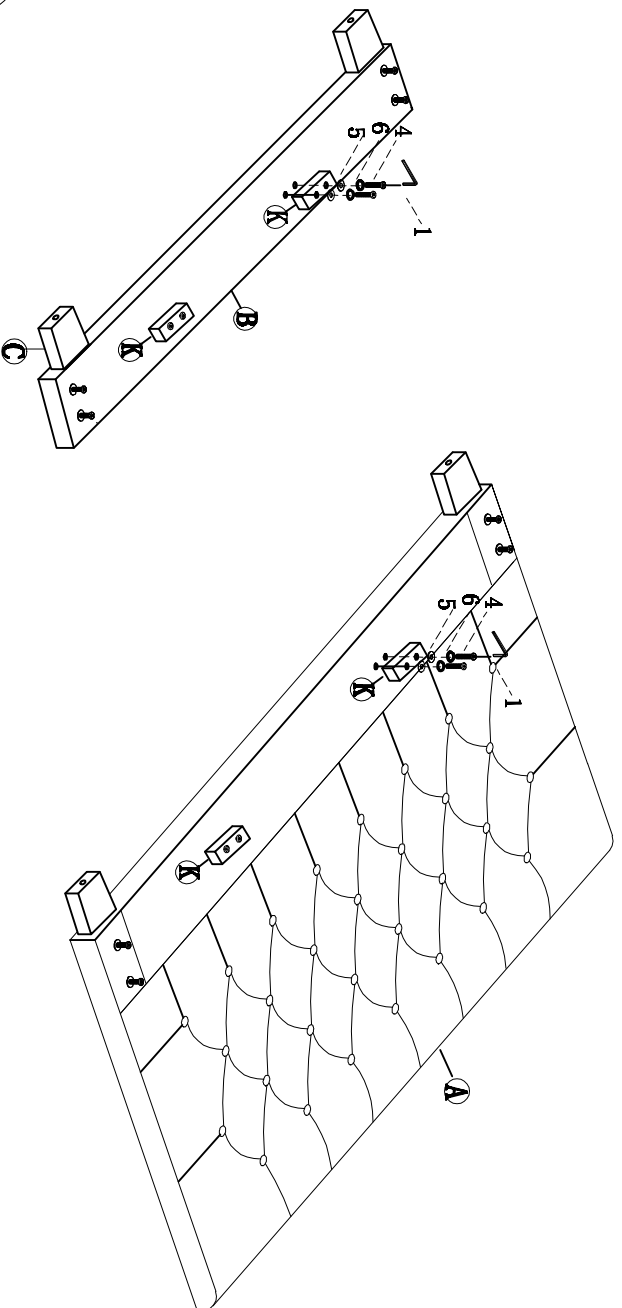


step 3

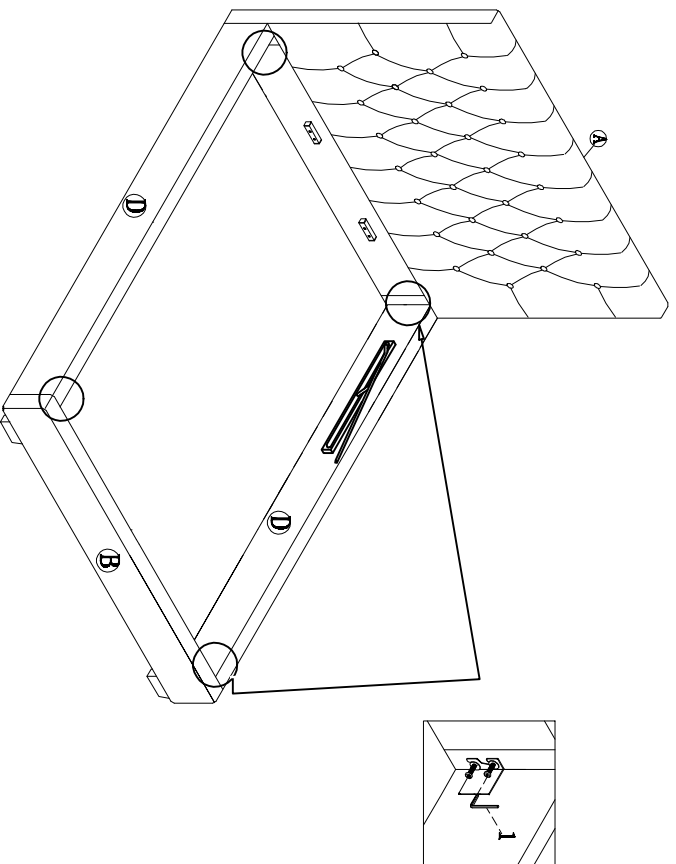


step 4

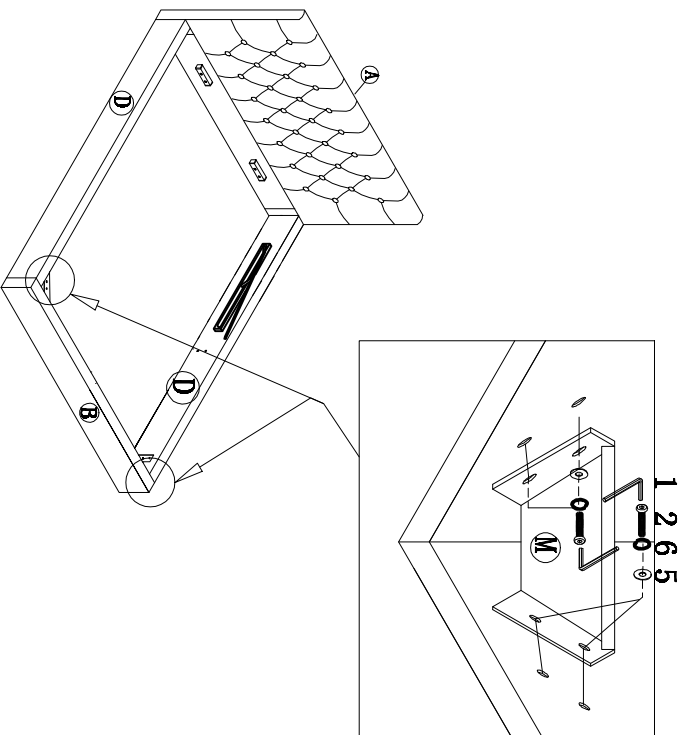


step 5

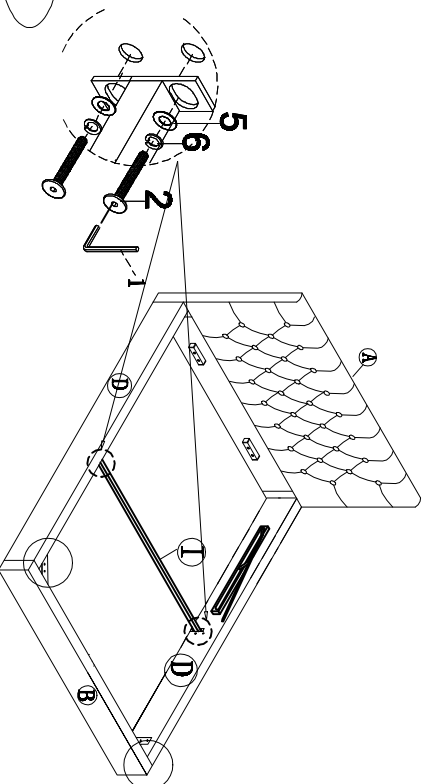


step 6

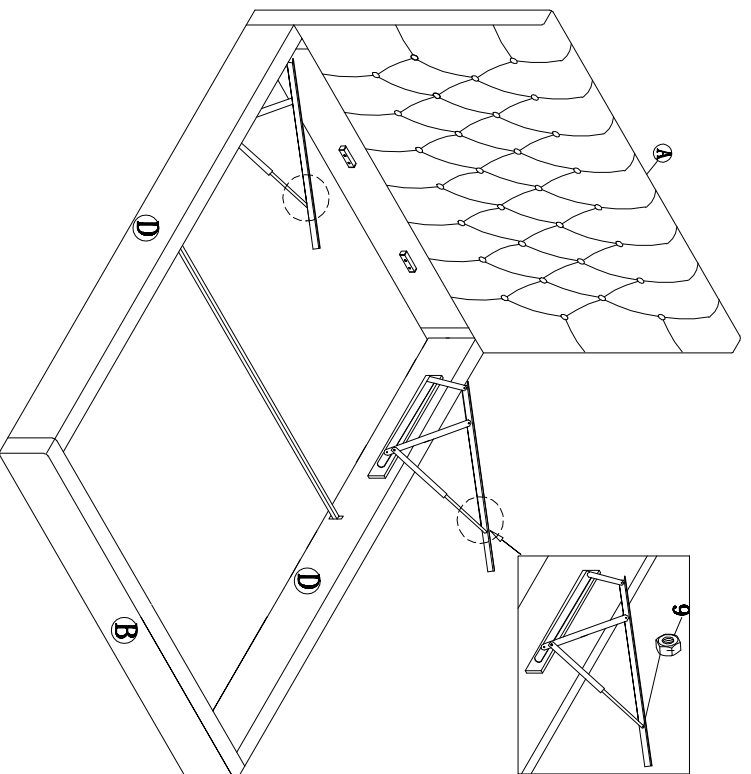

step 7

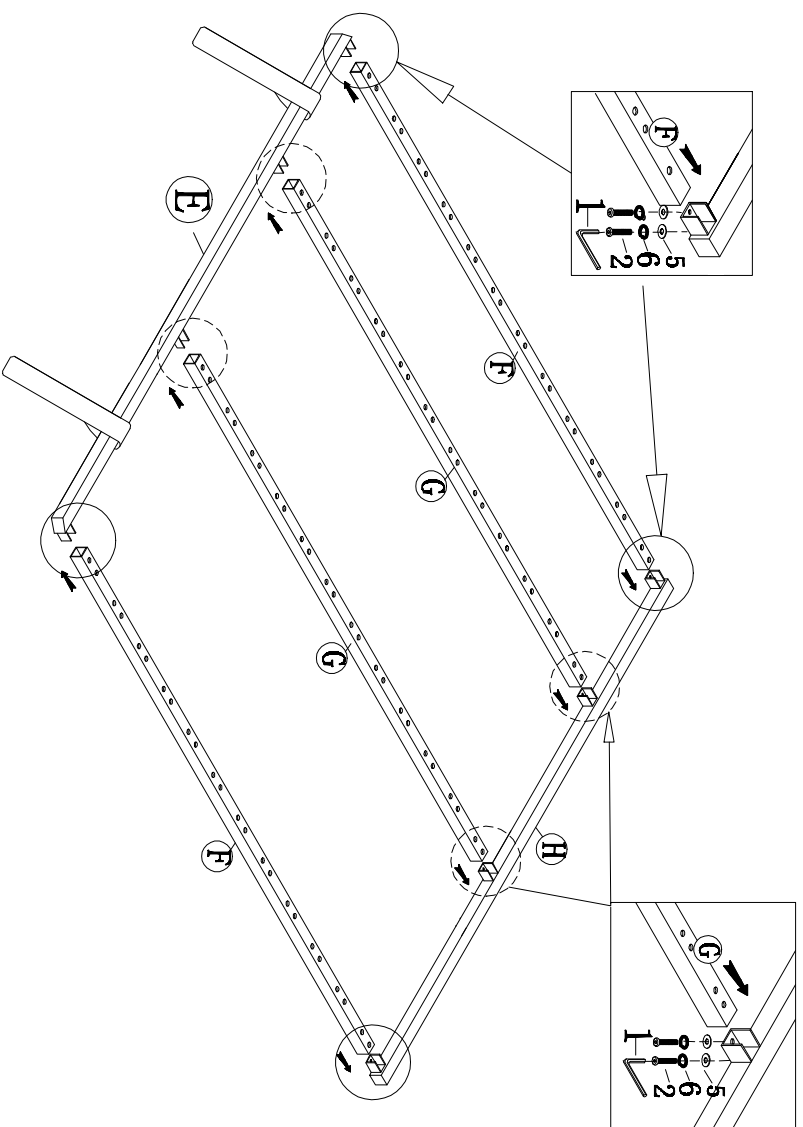


step 8

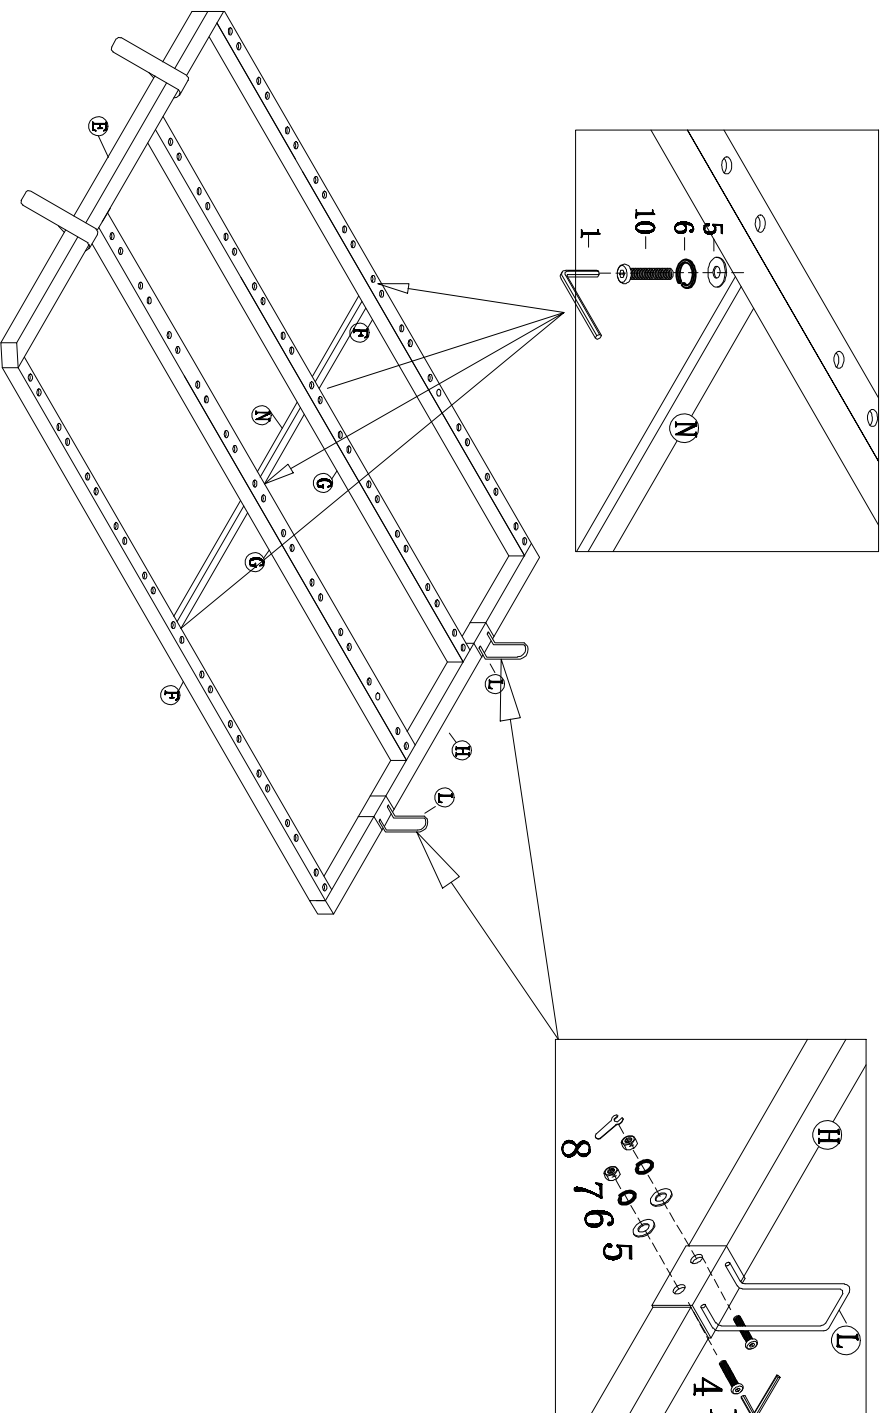


step 9


step 10

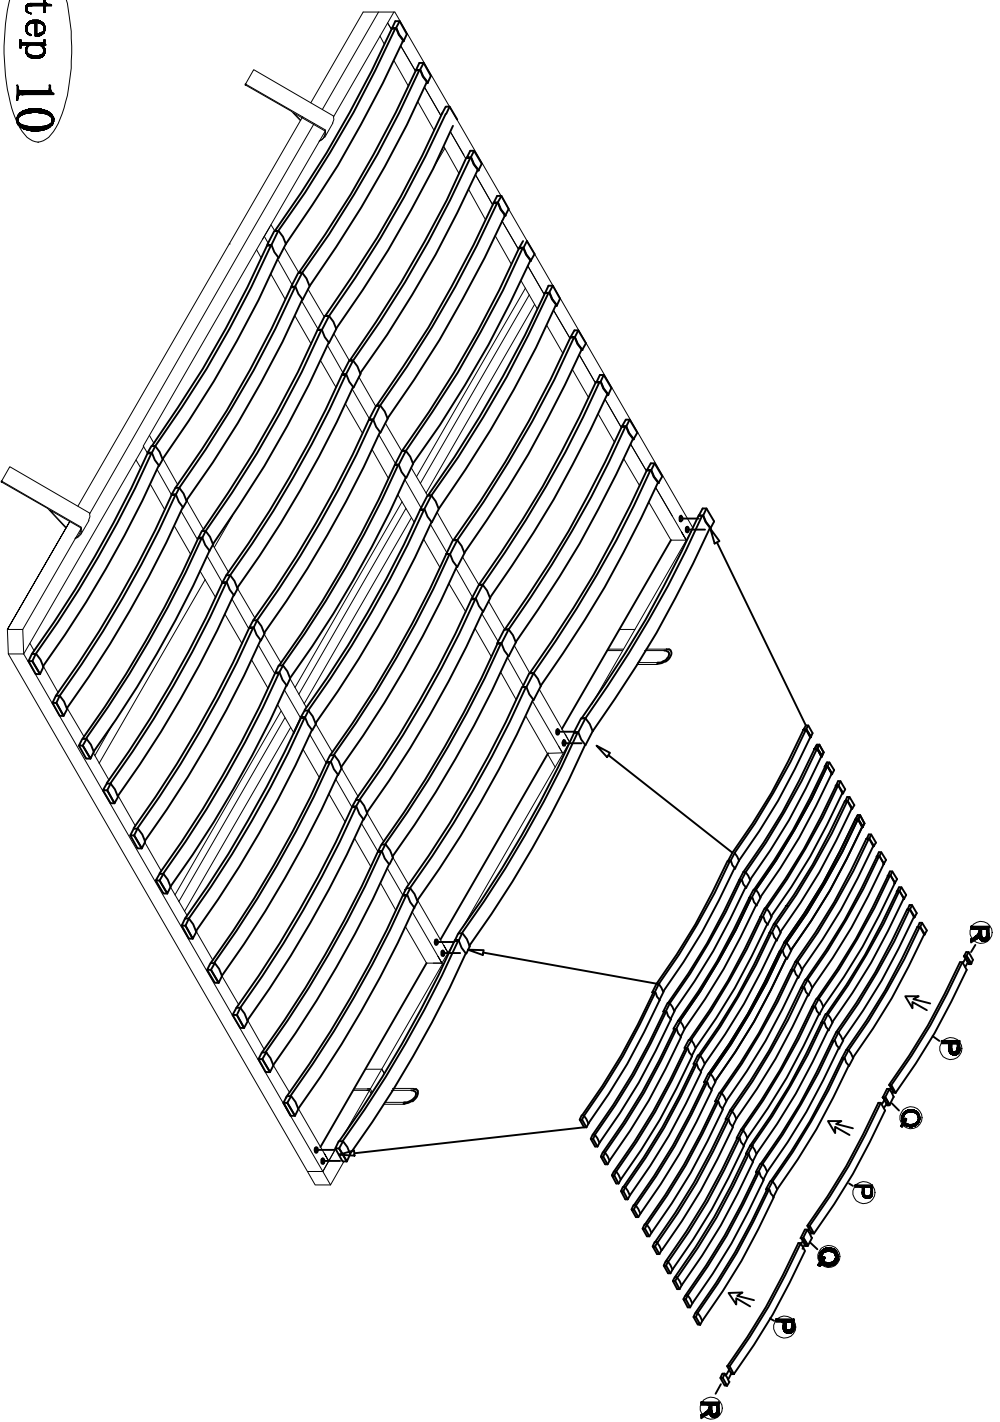

step 11

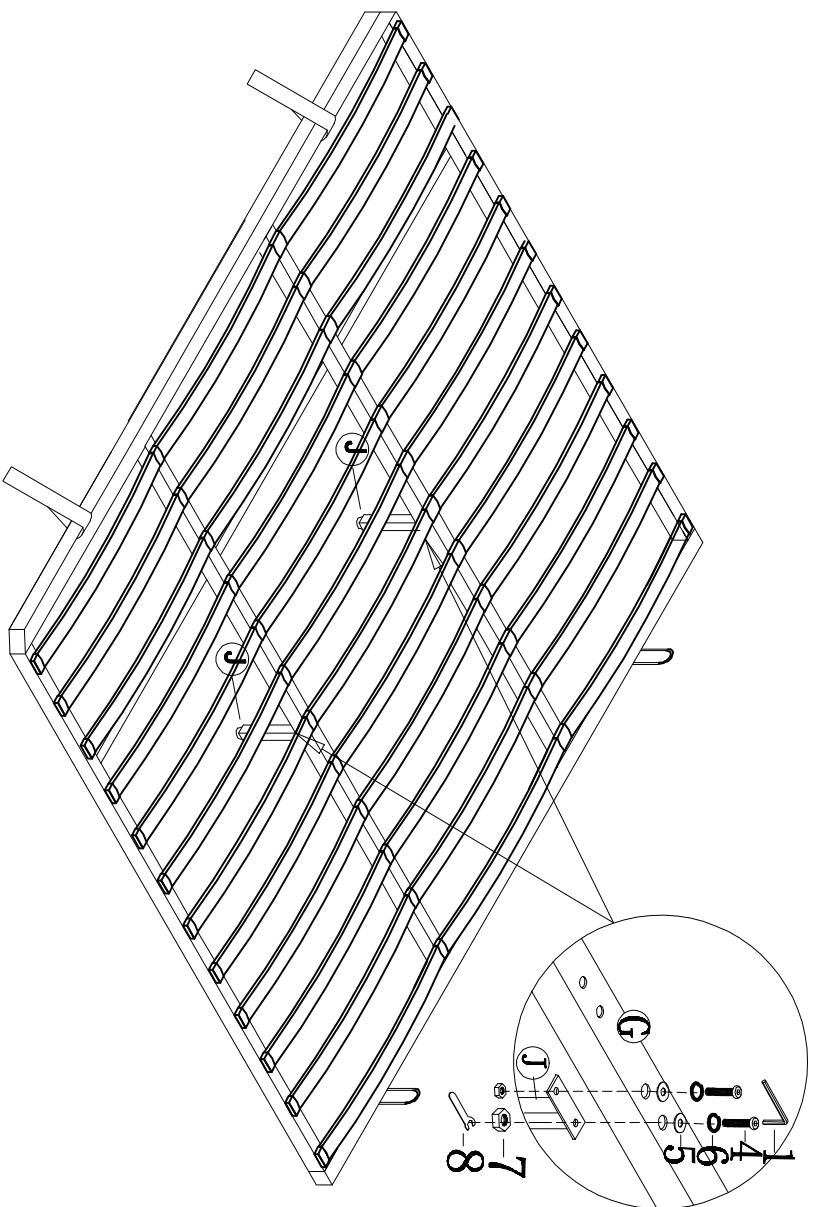

step 12

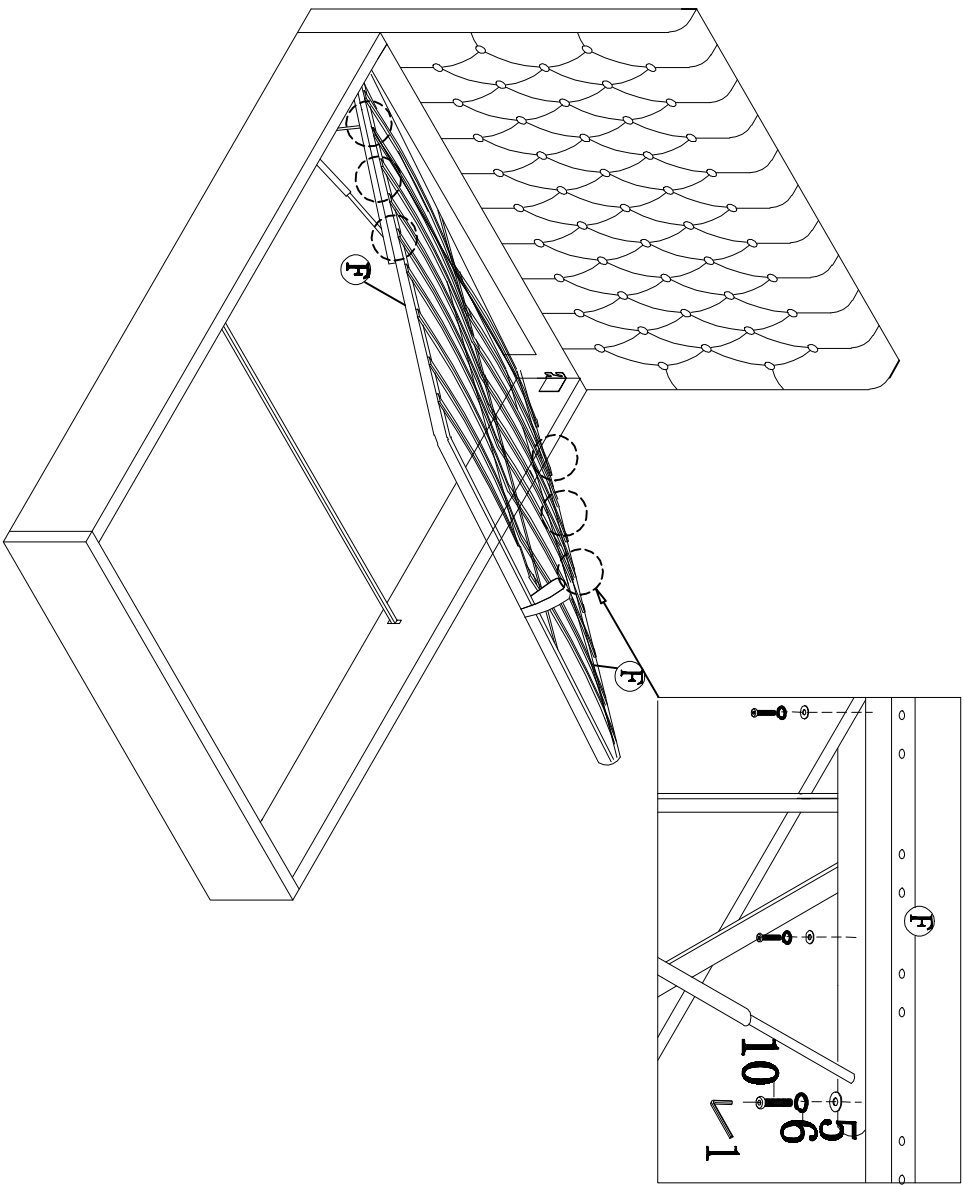

step 13

